

Installation Instructions for PVC Column Wraps:

Step 1

Prior to installing the column, inspect all posts to verify that they are secure and straight enough to allow for plumb installation. If problems exist, ensure the posts are corrected prior to installing wraps.

Step 2


While keeping all four sides of the column wraps securely together make any necessary cuts to adjust the column length to match the necessary height.

Step 3

Add any blocking to the structural post necessary to ensure that fasteners adequately grab; avoid blocking too tightly – *allow room for the post to move.*

Step 4

Carefully remove the loose side of the Post Wrap and slide the column in place so that the **open section** of the column faces the **inside of the porch** (towards the house).

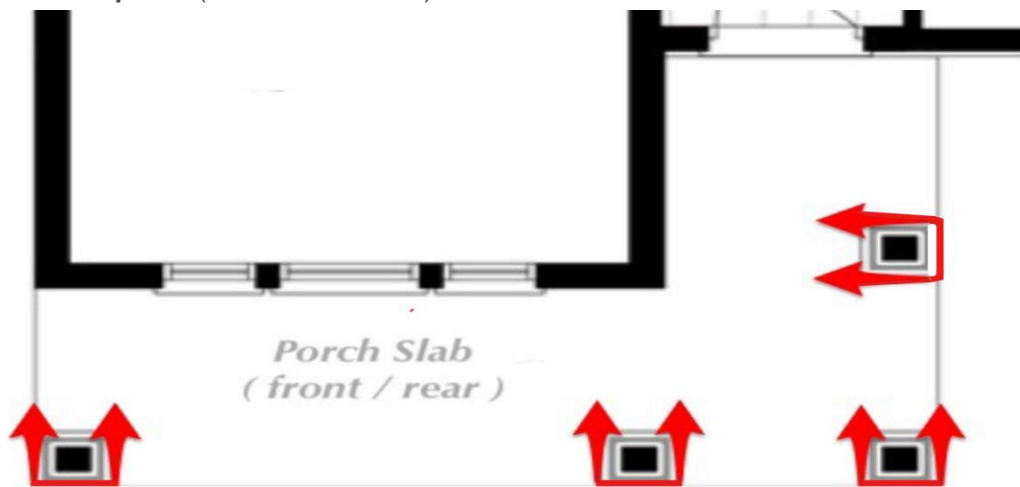

Always install the open end of the column facing the house

Step 5

Install the loose panel to the rest of the column by securing with galvanized or stainless-steel brads **only along the edges / corners of the column.**

Step 6

Make sure the column is square and plumb before securing it to the blocking or post. When possible, only face nail the sides of the column that face right or left. Avoid securing the column through the sides that face the street or house.



Step 7

Install caps or decorative moldings per design with galvanized or stainless-steel brads.